

ECHO FRAMES OPTICIAN GUIDE

TAKE THIS CARD TO YOUR OPTICIAN



To get prescription lenses or have your frames adjusted,
take your Echo Frames and this card to your optician.

OPTICIAN GUIDE

PLEASE READ THIS CARD BEFORE MAKING ANY ADJUSTMENTS

WHAT IS ADJUSTABLE?

Echo Frames contain electronics.

The temple tips are the **ONLY** adjustable parts on the frames.

ADDITIONAL INFO?

To see more information on how to handle Echo Frames and warranty coverage, go to amazon.com/EchoFramesRX.

FOLLOW INSTRUCTIONS TO AVOID DAMAGE



NO ALCOHOL SOLUTIONS ON FRAMES

To remove ink from lenses, apply isopropyl alcohol (70% max) with caution.



COLD MOUNT ONLY

Do not heat the front frame



NOT WATERPROOF

Do not rinse under running water

NOT ADJUSTABLE

NO HEAT

Contains Electronics

ADJUSTABLE

HEAT OK

No Electronics



NO HEAT FROM
METAL ACCENT FORWARD

HEAT OK FROM METAL
ACCENT TO TEMPLE TIP



HOLD FIRMLY TO ADJUST

Hold on to the metal accent



NO ULTRASONIC CLEANERS

Do not submerge the frames



HEAT OK ON TEMPLE TIPS

Use 100°-120°F



DO NOT ADJUST WITH PLIERS

Pliers will damage internal sensors